


# PCIe/104 CAN Interface

CAN-IB130/230/630/PCIe 104

## USER MANUAL

4.01.0238.20000 2.2 en-US ENGLISH

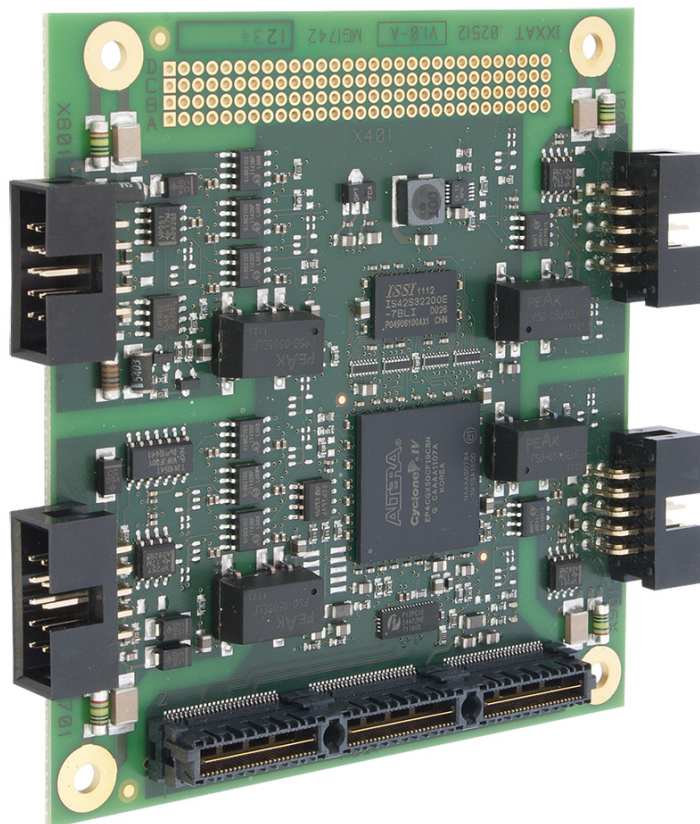

---

# Important User Information

## Disclaimer

The information in this document is for informational purposes only. Please inform HMS Networks of any inaccuracies or omissions found in this document. HMS Networks disclaims any responsibility or liability for any errors that may appear in this document.

HMS Networks reserves the right to modify its products in line with its policy of continuous product development. The information in this document shall therefore not be construed as a commitment on the part of HMS Networks and is subject to change without notice. HMS Networks makes no commitment to update or keep current the information in this document.

The data, examples and illustrations found in this document are included for illustrative purposes and are only intended to help improve understanding of the functionality and handling of the product. In view of the wide range of possible applications of the product, and because of the many variables and requirements associated with any particular implementation, HMS Networks cannot assume responsibility or liability for actual use based on the data, examples or illustrations included in this document nor for any damages incurred during installation of the product. Those responsible for the use of the product must acquire sufficient knowledge in order to ensure that the product is used correctly in their specific application and that the application meets all performance and safety requirements including any applicable laws, regulations, codes and standards. Further, HMS Networks will under no circumstances assume liability or responsibility for any problems that may arise as a result from the use of undocumented features or functional side effects found outside the documented scope of the product. The effects caused by any direct or indirect use of such aspects of the product are undefined and may include e.g. compatibility issues and stability issues.

---

# Table of Contents

Page

<b>1</b>	<b>User Guide</b> .....	<b>3</b>
1.1	Target Audience.....	3
1.2	Related Documents .....	3
1.3	Document History .....	3
1.4	Trademark Information .....	3
1.5	Conventions .....	4
<b>2</b>	<b>Safety Instructions</b> .....	<b>5</b>
2.1	Information on EMC .....	5
2.2	General Safety Instructions .....	5
2.3	Intended Use.....	5
<b>3</b>	<b>Scope of Delivery</b> .....	<b>5</b>
<b>4</b>	<b>Product Description</b> .....	<b>6</b>
<b>5</b>	<b>Installation</b> .....	<b>7</b>
5.1	Installing the Software .....	7
5.2	Installing the Hardware.....	7
<b>6</b>	<b>Connections</b> .....	<b>8</b>
6.1	Overview .....	8
6.2	Fieldbus Connector .....	9
<b>7</b>	<b>Firmware Update</b> .....	<b>10</b>
<b>8</b>	<b>Technical Data</b> .....	<b>10</b>
<b>9</b>	<b>Support/Return Hardware</b> .....	<b>11</b>
9.1	Support .....	11
9.2	Return Hardware .....	11
<b>10</b>	<b>Disposal</b> .....	<b>11</b>
<b>A</b>	<b>Regulatory Compliance</b> .....	<b>13</b>
A.1	EMC Compliance (CE) .....	13
A.2	EMC Compliance (UKCA) .....	13
A.3	FCC Compliance Statement .....	13
A.4	Disposal and recycling.....	14

**This page intentionally left blank**

# 1 User Guide

Please read the manual carefully. Make sure you fully understand the manual before using the product.

## 1.1 Target Audience

This manual addresses trained personnel. Trained personnel are all persons who are familiar with the installation and use of interfaces. Only ESD trained staff is authorized to install the interface. The contents of the manual must be made available to any person authorized to use or operate the product.

## 1.2 Related Documents

Document	Author
Installation Guide VCI Driver	HMS

## 1.3 Document History

Version	Date	Description
2.0	November 2017	Revised and edited in new design, added FD variant
2.1	June 2019	Layout changes
2.2	December 2021	Added CAN FD bit rates, CAN controller clock frequency for CAN FD interfaces, UK conformance, VCI CD removed

## 1.4 Trademark Information

Ixxat® is a registered trademark of HMS Industrial Networks. All other trademarks mentioned in this document are the property of their respective holders.

## 1.5 Conventions

Instructions and results are structured as follows:

- ▶ instruction 1
- ▶ instruction 2
  - result 1
  - result 2

Lists are structured as follows:

- item 1
- item 2


**Bold typeface** indicates interactive parts such as connectors and switches on the hardware, or menus and buttons in a graphical user interface.

```
This font is used to indicate program code and other
kinds of data input/output such as configuration scripts.
```

This is a cross-reference within this document: [Conventions, p. 4](#)


This is an external link (URL): [www.hms-networks.com](http://www.hms-networks.com)

Safety advice is structured as follows:


	<p>Cause of the hazard!</p> <p>Consequences of not taking remediate action.</p> <p>How to avoid the hazard.</p>
---	---


Safety signs and signalwords are used dependent on the level of the hazard.


---

 *This is additional information which may facilitate installation and/or operation.*

---

	<p>This instruction must be followed to avoid a risk of reduced functionality and/or damage to the equipment, or to avoid a network security risk.</p>
---	--

	<p><b>Caution</b></p> <p>This instruction must be followed to avoid a risk of personal injury.</p>
---	--

	<p><b>WARNING</b></p> <p>This instruction must be followed to avoid a risk of death or serious injury.</p>
---	--

## 2 Safety Instructions

### 2.1 Information on EMC



Risk of interference to radio and television if used in office or home environment!

Use exclusively included accessories. Use exclusively shielded cables.

Make sure that the shield of the interface is connected with the device plug and the plug on the other side.

### 2.2 General Safety Instructions

- ▶ Protect product from moisture and humidity.
- ▶ Protect product from too high or too low temperature (see *Technical Data, p. 10*).
- ▶ Protect product from fire.
- ▶ Do not paint the product.
- ▶ Do not modify or disassemble the product. Service must be carried out by HMS Industrial Networks.
- ▶ Store products in dry and dust-free place.

### 2.3 Intended Use

The interfaces are used to connect computer systems to CAN and LIN networks. The interfaces can be stacked on top of a host single board computer.

## 3 Scope of Delivery

Included in the scope of delivery of standard variant:

- PC CAN interface
- box header/D-Sub-9 adapter
- Installation Guide *VCI Driver*
- User Manual *PCIe/104 CAN Interface*

Drivers for Windows, Linux and real-time operating systems, including programming examples, CAN bus monitor and software design guides are available on [www.ixxat.com/support](http://www.ixxat.com/support).

## 4 Product Description

### Common Features

- PCIe/104 interface according to the PCI/104 Express™ and PCIe/104™ specification V2.01
- coupling according to PCI Express Base specification, Revision 1.1
- ISO 11898-2 CAN bus coupling (high-speed)
- common driver interface for easy exchange of PC interface type

### CAN-IB130/PCIe 104

- passive interface
- available with 1 or 2 CAN channels
- 1 channel variant galvanically isolated

### CAN-IB230/PCIe 104

- active interface
- available with 2 or 4 CAN channels
- optionally CAN low-speed interface according to ISO 11898-3 with 4 channel variant, high-speed/low-speed switchable via software
- 4 channel variant provides an additional LIN interface
- galvanically isolated

### CAN-IB630/PCIe 104

- active interface
- available with 1 or 2 CAN channels
- supports 2 CAN FD, switchable ISO CAN FD, non-ISO CAN FD or CAN2.0A/B
- galvanically isolated

## 5 Installation

### 5.1 Installing the Software

For the operation of the interface a driver is needed.

#### Windows



*The VCI driver is constantly improved and expanded! Check if a newer version is available on [www.ixxat.com/driver-windows](http://www.ixxat.com/driver-windows).*

- ▶ Download the latest VCI driver from [www.ixxat.com/driver-windows](http://www.ixxat.com/driver-windows).
- ▶ Install the VCI driver (see Installation Guide *VCI Driver*).

#### Linux and Real-Time Operating Systems

- ▶ Observe information about supported operating systems and interfaces on [www.ixxat.com/driver-linux](http://www.ixxat.com/driver-linux) and [www.ixxat.com/driver-real-time](http://www.ixxat.com/driver-real-time).

### 5.2 Installing the Hardware



Risk of ESD damages caused by improper handling!

Use ESD protective measures to avoid equipment damage.

- ▶ Make sure that the driver is installed.
- ▶ Turn off the computer.
- ▶ Pull the power cord.
- ▶ Determine the corresponding connector on the host single board computer.
- ▶ Plug the PCIe connector of the interface in the corresponding connector, without using force.
- ▶ Make sure that the interface is securely held on the host single board computer.
  - Hardware installation is complete.

## 6 Connections

### 6.1 Overview

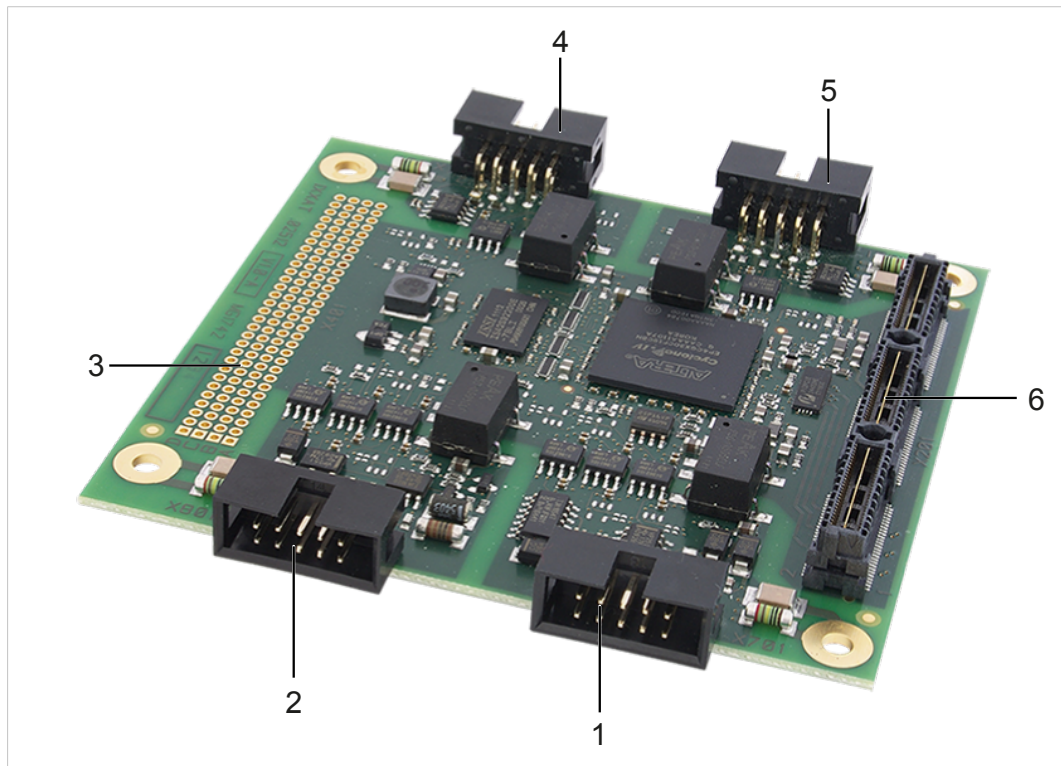


Fig. 1 Connectors

1	Channel 1, CAN high-speed, optional CAN low-speed or CAN FD
2	Channel 2, CAN high-speed, optional LIN or CAN FD
3	PCI/104 Stack-Through connector (optional)
4	Channel 4, CAN high-speed (only available with IB230)
5	Channel 3, CAN high-speed (only available with IB230)
6	PCIe/104 connector

## 6.2 Fieldbus Connector

Galvanic isolation of the bus coupling is optional. For a not galvanically isolated interface, the CAN ground and PC ground are at the same potential.



*For best noise immunity use shielded CAN cables.*

### CAN High-Speed/Low-Speed

CAN high-speed is provided on channel 1 to 4. CAN low-speed is available as an option. If the interface supports CAN low-speed it is possible to switch channel 1 from CAN high-speed to CAN low-speed via software.

### CAN FD

CAN FD is only available with the CAN-IB630/PCIe 104.

### LIN

The LIN interface is only available with the CAN-IB230/PCIe 104.

If the interface supports LIN, the signals are provided on channel 2. The LIN interface can be operated in Master and in Slave mode, selectable via software. Parallel operation of the LIN and CAN interface is possible.

**Pin Allocation of 10 Pin Box Header**

Pin no.	Signal	Comment
1	CAN-low (low-speed)	Optional, channel 1
2	—	—
3	CAN-low (high-speed/CAN FD)	—
4	CAN-high (high-speed/CAN FD)	—
5	CAN GND	—
6	LIN	Optional, channel 2
7	CAN-high (low-speed)	Optional, channel 1
8	VBAT <sub>LIN</sub>	Optional, channel 2
9, 10	—	—

HMS Industrial Networks offers a box header/D-Sub-9 adapter.

**Pin Allocation of D-Sub-9 of the Adapter**

Pin no.	Signal	Comment
1	CAN-low (low-speed)	Optional, channel 1
2	CAN-low (high-speed/CAN FD)	—
3	CAN GND	—
4	CAN-high (low-speed)	Optional, channel 1
5	—	—
6	—	—
7	CAN-high (high-speed/CAN FD)	—
8	LIN	Optional, channel 2
9	VBAT <sub>LIN</sub>	Optional, channel 2

## 7 Firmware Update

- For information about current version and downloading files and tools see support area on [www.ixxat.com](http://www.ixxat.com).

## 8 Technical Data

PCIe/104 interface	PCI Express Base Specification Rev. 1.1 PCI/104 Express™ and PCIe/104™ Specification V2.01.
Dimensions	90 x 96 mm (without box header)
Weight	Approx. 60 g
Power supply	Via PCIe/104 socket (3.3/5 VDC)
Operating temperature	-40 °C to +85 °C
Storage temperature	-40 °C to +85 °C
Galvanic isolation	1000 V DC for 1 sek, 800 V DC for 1 min, 700 V AC for 1 sek, 500 V AC for 1 min, 130 V working voltage AC/DC
Relative humidity	10 % to 95 %, no condensation
CAN propagation delay	With galvanic isolation typical 6 ns, max. 10 ns

### CAN-IB130/PCIe 104

CAN high-speed transceiver	TI SN65HVDV251
Current consumption	Typ. 3.3 V/190 mA, 5 V/25 mA
CAN bit rates	10 kBit/s up to 1 MBit/s

### CAN-IB230/PCIe 104

Current consumption	Typ. 3.3 V/350 mA, 5 V/230 mA
CAN bit rates	High-speed: 10 kBit/s up to 1 MBit/s Low-speed: 10 kBit/s to 125 kBit/s

### CAN-IB630/PCIe 104

Current consumption	Typ. 3.3 V/390 mA
CAN bit rates	High-speed: 10 kBit/s up to 1 MBit/s CAN FD: Arbitration rate: up to 1000 kbit/s, data rate: up to 8000 kbit/s (verified by testing) User defined bit rates are possible. Depending on the operating conditions (cable length, settings made, remote stations, etc.) the maximum data might not be reached or exceeded.
CAN controller/clock frequency	IFI CAN_FD IP/80 MHz

## 9 Support/Return Hardware

### 9.1 Support

- ▶ To contact support, go to [www.ixxat.com/technical-support/contact-technical-support](http://www.ixxat.com/technical-support/contact-technical-support).
- ▶ Scroll down and click button **mysupport.hms.se** to register a support case.

### 9.2 Return Hardware

- ▶ On [www.ixxat.com/support/product-returns](http://www.ixxat.com/support/product-returns) click button **Portal** to access the support portal.
- ▶ In the support portal select **Submit Product Return (RMA)**.
- ▶ Read the information and click **Create RMA Case**.
- ▶ Register a support account and sign in.
- ▶ Fill in the form for warranty claims and repair.
- ▶ Print out the Product Return Number (PRN resp. RMA).
- ▶ Pack product in a physically- and ESD-safe way, use original packaging if possible.
- ▶ Enclose PRN number.
- ▶ Observe further notes on [www.ixxat.com](http://www.ixxat.com).
- ▶ Return hardware.

## 10 Disposal

- ▶ Dispose of product according to national laws and regulations.
- ▶ Observe further notes about disposal of products on [www.ixxat.com](http://www.ixxat.com).

**This page intentionally left blank**

## A Regulatory Compliance

### A.1 EMC Compliance (CE)



The product is in compliance with the Electromagnetic Compatibility Directive. More information and the Declaration of Conformity is found at [www.ixxat.com](http://www.ixxat.com).

### A.2 EMC Compliance (UKCA)



The product is in compliance with the Electromagnetic Compatibility Regulations 2016. The Declaration of Conformity is available at [www.ixxat.com](http://www.ixxat.com)

### A.3 FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- ▶ This device may not cause harmful interference.
- ▶ This device must accept any interference received, including interference that may cause undesired operation.

<b>Product name</b>	CAN-IB130/PCIe 104, CAN-IB230/PCIe 104
<b>Responsible party</b>	HMS Industrial Networks Inc
<b>Address</b>	35 E. Wacker Dr, Suite 1700 Chicago, IL 60601
<b>Phone</b>	+1 312 829 0601



Any changes or modifications not expressly approved by HMS Industrial Networks could void the user's authority to operate the equipment.



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and the receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

## A.4 Disposal and recycling



You must dispose of this product properly according to local laws and regulations. Because this product contains electronic components, it must be disposed of separately from household waste. When this product reaches its end of life, contact local authorities to learn about disposal and recycling options, or simply drop it off at your local HMS office or return it to HMS.

For more information, see [www.hms-networks.com](http://www.hms-networks.com).

**This page intentionally left blank**

